



Installation Guide


Connolly Key Joints




1 Point key joint in desired location and drive in the supplied pegs. Note that the **longest flange** of the key joint always goes to the **top**.



2 Adjust the key joint to the correct height and secure by tapping in the supplied wedges. If capping strips are to be used allow the appropriate set down distance and apply capping strip prior to pouring concrete.

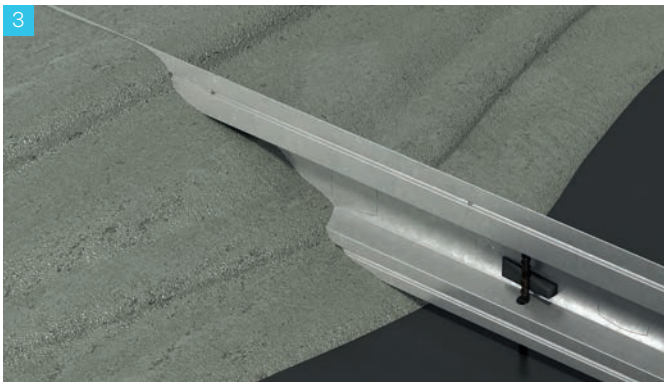

3 Place the reinforcement and pour the concrete over the key joint. Finish concrete surface to the top of the joint (**not above it**). Always pour concrete evenly to both sides of the joint and ensure concrete is compacted into the keyways.

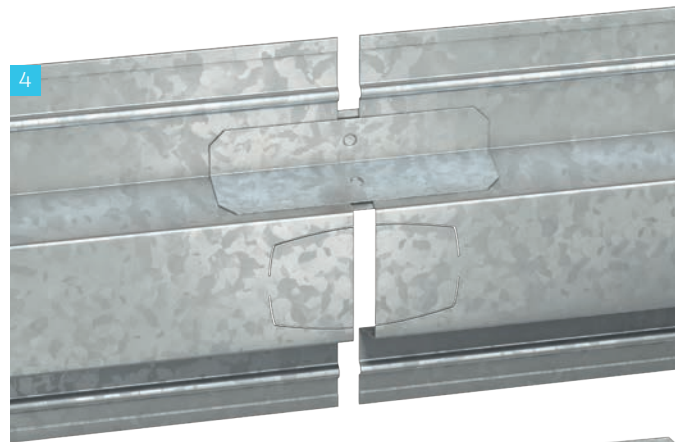

4 Use KJ Joiner to connect multiple Key Joint Profiles in situations where the joint is longer than the profile length of 3m or 6m.

